


# BISON TAMPER PROOF INSTALLATION INSTRUCTIONS

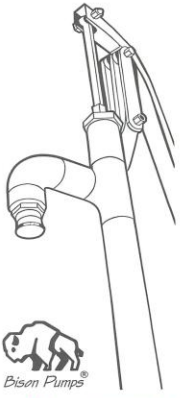

[www.bisonpumps.com](http://www.bisonpumps.com)

BISON PUMPS  
98 BANGOR STREET  
PO BOX 977  
HOULTON, ME 04730  
1-800-339-2601  
INFO@BISONPUMPS.COM

BPN-WA-039 BPN-147 BPN-148 BPN-149



1. Remove the (2) round truss head screws from the well adapter.
2. Place the well adapter together with the pump head on the well casing in the desired direction and make sure it is level.
3. Screw in the (2) round truss head screws into the well adapter until they bottom out against the sides of the casing which will score the casing and leave a mark showing hole drilling location. Loosen (2) round truss head screws and remove the screws. Raise the pump head and support it on the paddle.
4. Center punch the 2 marks left on well casing, then with the 7/32" (BPN-148) and 5/8" (BPN-149) drill bits that are provided, drill the 2 holes through completely, starting with the 7/32" (BPN-148) drill first. **Make sure these holes are drilled straight through, not on an angle.** Apply a small amount of silicone to the rim of the white plastic boot (BPN-WA-039), and then insert into the 5/8" holes. Push in tightly to seat.
5. Reinstall the pump head and adapter back on the well casing being careful not to pull out the boot from the casing and then align with the 2 drilled holes in the well casing.
6. Install (2) round truss head screws into the well adapter and tighten using the truss bit tool driver that is provided. **Do not force or overtighten the screws or the driver tool. If excess force is necessary, recheck the drilled holes and ream if necessary. Then try to install screws again. These should screw in easily.**
7. Tighten the remaining nuts and lock bolts of the well adapter as per the installation instructions.